



**Civil Aviation Authority of Papua New Guinea  
Register of Airworthiness Directives**

**PNG AD/Gen/007 Emergency Exits – Operational Test.**

**Issue 1. 01/02/05**

**Applicability:**

All aircraft, that have an emergency exit which is not a normal entry/exit door or a rip panel type other than those where the maintenance programme details procedures for the periodic operation and removal of emergency exits.

**Requirement:**

With the aircraft in it's normal operating configuration, i.e. with all trim and interior fittings installed; operate the emergency exits in accordance with the placarded instructions. When the operating mechanism is protected by a breakable cover this may be removed before operating the exit.

**Compliance:**

1. Unpressurised aircraft - at periods specified in the approved maintenance programme or at intervals not exceeding 12 months;
2. Pressurised aircraft: - at periods specified in the approved maintenance programme or every six months;
3. At any time there is a role equipment change that may inhibit removal of the exit.

**WILSON SAGATI**

Deputy Director – Aviation Safety Regulations

Note. This AD is based on Australian AD/General/37 Amendment 6.